

For Tuna Storage

-60°C Deep Freezer



Features

- High efficiency low noise SECOP compressor, reliable and long working life.
- CFC-free, environmentally safe refrigerant.
- EBM cooling fan for safety, stability, low noise and better heat dispersing.
- High density insulation foam for stable long hold over time of temperature, energy saving.
- Microprocessor controller, digital display, adjustable temperature range: -30°C~-60°C.
- Wide voltage tolerance design with applicable voltage range of -192~-242V/AC.

Qingdao Innova Bio-Meditech Co., Ltd

ADD: No. 1057 Jinshui Road, 266100, Qingdao, China

Email: info@innobiomed.com

Website: www.innovabiomed.com

-60°C Deep Freezer

INNOVA deep freezer is specially designed to store tuna at the ideal temperature of -60°C, even in the environment temperature of 32°C. To secure excellent performance and high quality, high efficiency compressor and advanced refrigeration system is adopted.

TUNA

Tuna is a large, distinctive, pelagic and world's most popular commercial fish. It has a pink to dark red flesh, a firm texture and contains the valued Omega-3 oil.




Magic Temperature: -60°C

-60°C is the PERFECT storage temperature for tuna.

The moisture inside of tuna cell starts freezing at -1.5°C. When the temperature reaches -60°C, all moisture inside of tuna cell is frozen.

The biological activities suspend and tuna meat sustains no deterioration at this temperature.

If the temperature is above -60°C (-30°C for instance), tuna meat deteriorates all the while before it is ultimately consumed. It will lose its superb red color and fantastic taste.

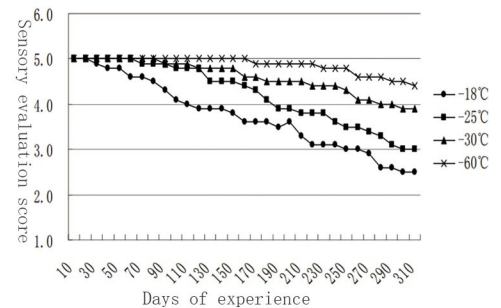

Specifications

Model	MF-60H60	MF-60H100	MF-60H200	MF-60H300	MF-60H400	MF-60H500
Temperature setting (°C)	-30~-60	-30~-60	-30~-60	-30~-60	-30~-60	-30~-60
Climate Type	N	N	N	N	N	N
Voltage	220V/50Hz	220V/50Hz	220V/50Hz	220V/50Hz	220V/50Hz	220V/50Hz
Power (W)	180	180	300	300	350	400
Net Capacity (L)	60	102	212	322	402	502
External Dimensions (mm) W*D*H	460*540*850	700*540*850	945*775*890	1275*775*890	1530*775*890	1900*775*890
Internal Dimensions (mm) W*D*H	325*390*455	520*345*630	760*485*625	1080*485*625	1340*485*625	1710*485*625
Nos of Basket (pcs)	1	1	2	2	2	2
Casters	4	4	4	4	4	4
Net Weight (kg)	32	40	65	75	85	110

